


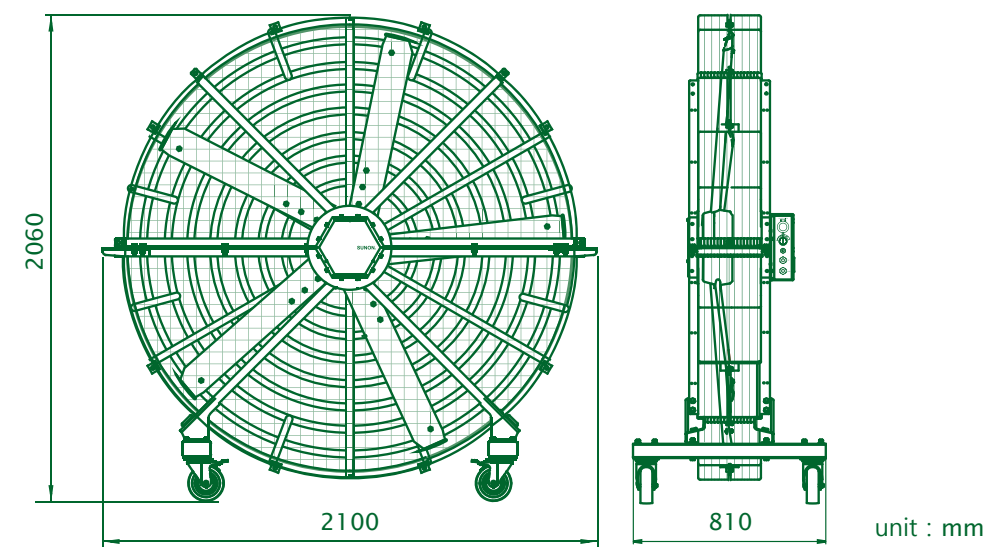

Power Source	Max Speed (rpm)	Max Power Consumption (W)	Max Rated Current (A)	IP Rating	Noise dB(A)	Weight (kg)
100-240 VAC 1Φ,50/60Hz	285	523	5.13	IP55	<50	130

Warranty

Purchase Date

Serial Number

DDMMYY

© Product Warranty

We offer 1 year warranty of our product starting from your purchase date.

The following scenarios are excluded from our warranty service. Repairing request will be accepted, but the customer will be charge for cost and service fee.

1. Damage of improper installation.

2. Damage of retrofit.

3. Damage of force majeure: Nature, actions of third parties

4. Damage of misuse, abuse, accident.

5. Damage of improper transportation.

6. The warranty document, purchase date or purchase confirmation (like invoice) from authorized dealer cannot be provided by the customer.

Retailer's Stamp

SUNONWEALTH ELECTRIC MACHINE INDUSTRY CO.
 No. 30, Ln. 296, Xinya Rd., Qianzhen Dist., Kaohsiung City 806, Taiwan
 E-mail: sunon@sunon.com

Portable HVLS Fan

Installation Manual

Europe : BPNE3EB078A-01P
 Asian : BPNE3EB078A-01P

Thank you for purchasing SUNON products!


- Please read this manual carefully before use, use the product accordingly and keep the manual in safe place.
- In order to protect your rights and interests, please make sure that the deals records the purchase date, dealer's name, etc. on the guarantee.

2022/11/22 (NMP)

Precautions

- The power supply must be properly connected to the declared voltage range of the product.
- To avoid danger, do NOT touch the safety guard when the fan is in use or before the blades stop.
- Never put the fan on an uneven surface to use, for fear of danger.
- Before using the fan, please make sure that the front and rear fixed wheels have been locked, for fear of danger.
- Please do NOT knock or hit the safety guard intentionally, for fear of danger.
- "This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved."
- Children shall not play with the appliance.
- This product can only be used at altitudes below 2,000 m.

Fan Operation

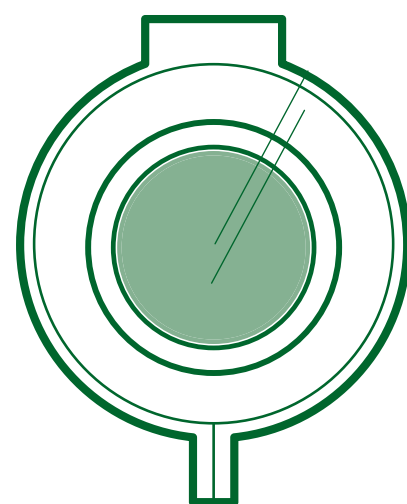

POWER

Power Switch



MIN

MAX

SPEED CONTROL


Speed Control

Fan Cleaning & Maintenance

NOTICE

- ⚠ Turn the power off before maintaining or cleaning the unit in case of the power from being accidentally switched.
- ⚠ It is recommended that an air blow gun should be used for removing the dust accumulated on the safety guard and the blades.
- ⚠ Do NOT wipe it by using gasoline, toluene, detergent or any other such chemicals.
- ⚠ Please schedule an annual maintenance to ensure the fan's safety and efficient operation.
- ⚠ If you have any questions, please contact Customer Service.

General Troubleshooting

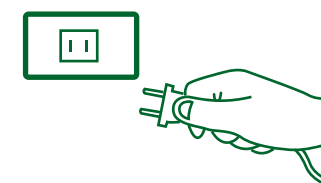

Issues can be resolved before reaching out the service.
Refer to the tips below before contacting Customer Service.

Turn the power off before maintaining or cleaning the unit
in case of the power from being accidentally switched.

Symptom	Possible Solutions
The fan is standstill.	1. After turning on the fan power, make sure that the power indicator is on. 2. Make sure that the power supply is correctly connected to the declared voltage range of the product. 3. After turning on the fan, make sure that the 2 short beeps sound appears. 4. If all the foregoing steps can be operated normally, turn off the fan power to leave it for 5 minutes, and then restart it. If it is still unable to restart, please contact Customer Service.
The fan stops after beginning to operate	1. Make sure whether the fan still stops even if its speed is lower. 2. Make sure that the power supply is correctly connected to the declared voltage range of the product. 3. If all the foregoing steps can be operated normally, turn off the fan power to leave it for 5 minutes, and then restart it. If it is still unable to restart, please contact Customer Service.
The strange noise from the fan when it is running	Check for loose screws